


# THE SHARPER IMAGE®

*Professional Series™*  
**Ionic Breeze GP®**  
Silent Air Purifier  
with Ultraviolet  
Germicidal Protection

SI830 Instructions

**SHARPER IMAGE DESIGN®**

**Read and save these instructions.**

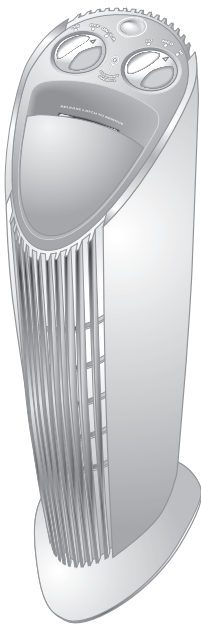



*Dear Sharper Image Customer,*

*Thank you for your purchase of a Sharper Image product. We appreciate your business very much.*

*This item was created by Sharper Image Design, our company's own product development group. Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.*

*For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life better and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.*

*Enjoy your purchase!*

*Respectfully,*

A handwritten signature in cursive script that reads "Richard".

*Richard Thalheimer*

*Founder, Chairman and Chief Executive Officer*

*Call 1-800-344-4444 for 24-7 ordering and customer service,  
or go to **www.sharperimage.com**, our complete online store.*



# Table of Contents

Warnings .....	6
Caution .....	8
Frequently Asked Questions .....	9
Setup and Operation.....	10
Cleaning the Collection Grid .....	12
Thorough Cleaning.....	14
Additional Information .....	15
Germicidal Lamp Replacement .....	15
Statement of FCC/DHHS Compliance .....	17

# Warnings

**Warning:** To reduce the risk of fire, electric shock, or injury when using any electrical appliance, basic precautions should always be observed, including the following:

- This appliance operates at 110-120V AC and 60Hz only.
- Connect to a properly grounded outlet only.
- Use indoors only.
- Unplug from outlet when not in use and before servicing.
- Do not allow the appliance to be used as a toy. Close attention is necessary when the appliance is operated near children.
- Use only as described in this user manual.
- Do not use if cord or plug appears to be damaged. If the appliance is not working properly or has been dropped, damaged, left outdoors, or dropped into water, return it to a service center or to the original place of purchase.
- Do not pull, lift or carry by the power cord. Do not use the cord as a handle, close a door on the cord, or pull the cord around or against sharp edges or corners.
- Keep the cord away from heated surfaces.

# Warnings

- A damaged power cord must be replaced by qualified service personnel only. There are no user-serviceable parts inside the unit. Any attempt to open the unit will void the warranty and could lead to serious damage to the unit and/or personal injury to the user.
- Before unplugging unit from the outlet, turn off all the controls.
- Do not unplug by pulling the cord. Grasp the plug itself, not the cord, when unplugging from an outlet.
- Do not handle the plug or appliance with wet hands.
- Do not put any object into openings. Do not continue to use with any opening blocked. Keep all openings free of dust, lint, hair or anything that may reduce airflow.
- Keep hair, loose clothing, fingers and all parts of the body away from openings.
- Do not operate the unit in areas where flammable or combustible products or vapors may be present.

**READ AND SAVE THESE INSTRUCTIONS**

# Caution

This product generates invisible ultraviolet light. To avoid overexposure when the lamp is on, persons must stay at least one foot away from the unit if the total duration of exposure to the unit will be more than 30 minutes per day. Shorter duration of exposure at close proximity is safe. If the enclosure is damaged, do not use the product.

Never stare at the U.V. lamp or place your face directly against the front or rear grill during operation.

Failure to follow these warnings can result in direct exposure to germicidal light, which can cause temporary or chronic damage to your eyesight, or may even result in blindness.

The collection grid has many edges and areas that can trap water. If running water is used to clean the grid, allow the collection grid to dry completely.

If candles or oil lamps are burned, the collection grid must be cleaned immediately or the collected soot may be released back into the room. In any area where this product will be subjected to heavy pollution it will be necessary to clean the collection grid more frequently.



## Frequently Asked Questions

### **How often is cleaning required?**

At least every two weeks or anytime the Ionic Breeze® makes an audible sound or the cleaning indicator lights.

### **How should it be cleaned?**

Wipe the removable collection grid with a damp cloth, paper towel or sponge. It is very important that the collection grid be allowed to dry completely before returning it to the main housing.

### **What is the clean fresh scent I smell?**

This scent is ozone ( $O^3$ ), a combination of three oxygen atoms. (The U.S. government has set safe standards for ozone and the Ionic Breeze complies with those standards.)

### **Which power setting should I use?**

If the odor of ozone is strong (for instance in a smaller room), you may prefer to have the power setting on medium or low.

**Please read this product instruction manual for important safety information and operating instructions.**

## Setup and Operation

Place the *Professional Series*™ Ionic Breeze GP® at least twelve inches from the wall and in a location where children cannot stare directly into the unit at a close range.

Plug into a grounded 110V outlet. (Read Warnings for details.)

Blue Glow coming from within the unit indicates that the germicidal lamp is operating.




Switch the **MODE CONTROL** to the desired setting:

**ON** - The unit will clean and circulate the air but the germicidal lamp is not activated.

**ON/G.P.** - Air is also passed through the UV light produced by a germicidal lamp.

Mode Control

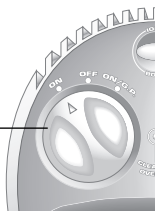



## Setup and Operation

Switch the **POWER CONTROL** to the desired **HI**, **MED** or **LO** setting:

Normal operation at all power levels involves a preprogrammed cycle of altering high and low air movement.

To override the **POWER CONTROL** setting and to run the unit at maximum power for five minutes, press **BOOST/IONS** until the button turns blue.

Your previously selected power level resumes after five minutes.

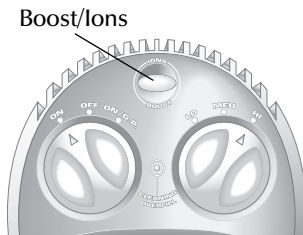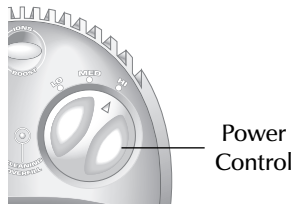

To activate the Negative-Ion Feature™, press **BOOST/IONS** until the button turns green. This feature adds millions of negative ions to the airflow to freshen your indoor environment. To cancel, press the button again.

## Setup and Operation


**Note:** Use of this feature increases negative-ion output and may increase soot buildup near the product.

### Cleaning the Collection Grid

Clean the grid every one or two weeks. As a reminder, the cleaning indicator light turns amber after two weeks. If the cleaning indicator light turns red, the unit has shut down because of excessive dirt or circuitry problems. In most cases, a thorough cleaning returns the unit to normal operation.


Before cleaning, unplug the unit.

Remove the collection grid by releasing the latch and pulling the grid from the top of the unit.

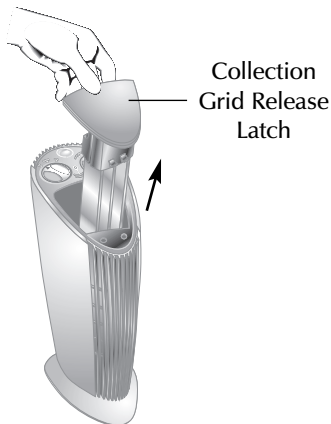

## Cleaning the Collection Grid

Use a dry or slightly damp towel or sponge to quickly wipe the dust from each of the three collection bars.

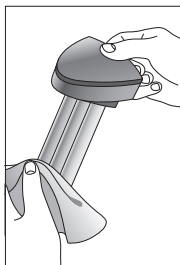

Before replacing the grid, invert the entire unit two or three times.



## Thorough Cleaning

If the unit makes noise during operation, a thorough cleaning of the grid and ionizing wires may be required.

Remove the collection grid by pulling it from the top of the unit.

Wash the grid with warm soapy water, rinse and **allow to dry for 24 hours** before returning to unit.

Use a compressed gas dusting product to remove any accumulated particles from the ionizing wires and to blow out any dust that is settled in the base of the unit. (Because of the dust, it is advisable to do this outside.) The *Professional Series*™ Ionic Breeze GP® also features a rear grill that slides off for easy cleaning.



## Additional Information

The exterior of the unit can be cleaned using a cloth or sponge and a solution of one part household bleach to five parts water or any bleach-based spray cleaner.

Before plugging the unit back into an outlet, allow the surface to dry completely.

The unit will not function while the collection grid is removed and/or the germicidal lamp cover is removed.

The Ionic Breeze® complies with U.S. safety standards for low ozone emission (less than 50 parts per billion). We recommend that individuals with a history of respiratory disease consult with their doctor about possible heightened sensitivity to very low ozone.

## Germicidal Lamp Replacement

**To order replacement lamps directly from The Sharper Image, call 1-800-344-4444 and order item number SI922.**

Lamps are effective for about 12 months of continuous use. To maintain maximum performance, the lamp should be wiped free of particles every three months.

## Germicidal Lamp Replacement

Oil from fingers will reduce the germicidal performance of the U.V. lamp. If possible, use gloves or handle only by the metal area of the lamp. Otherwise, clean the lamp after installing to remove fingerprints and oils.

**To clean:** Wipe the lamp, using a paper towel lightly dampened with rubbing alcohol or an ammonia-based cleaner (such as Windex brand).

Remove the cover by lifting up on the **RELEASE TAB** at the bottom of the cover and sliding the the cover upward.

Turn the lamp 1/4 turn (two "clicks") and slide it from its fixture. Replace with a new one of the same type.

Dispose of used fluorescent lamps in accordance with local regulations.





## Statement of FCC/DHHS Compliance

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This product complies with DHHS Rule 21 subchapter J at date of manufacture.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

## **Statement of FCC/DHHS Compliance**

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.



# Full Five-Year Warranty

## What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

## How Long Coverage Lasts

This warranty runs for five years from the date of original purchase.

## What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

## What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

## How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

**T.S.I. - Returns Department**  
**2901-A West 60th Street**  
**Little Rock, AR 72209**

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at [care@web.sharperimage.com](mailto:care@web.sharperimage.com).

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

© 2004, 2005 Sharper Image Corporation

Sharper Image Corporation  
650 Davis St., San Francisco, CA 94111  
(415) 445-6000

Shop online: **[www.sharperimage.com](http://www.sharperimage.com)**

Due to continuing improvements, actual product may differ slightly from the product described herein.

V2 08/04